

Important information - safety

General information

Read this installation guide and the safety instructions carefully before installing this Somfy product. All the instructions given must be followed closely and this guide must be stored in a safe place throughout the service life of your product.

These instructions describe how to install and commission this product.

Any installation or use outside the field of application specified by Somfy is forbidden.

This invalidates the warranty and discharges Somfy of all liability, as does any failure to comply with the instructions given herein.

Somfy cannot be held responsible for any changes in standards which come into effect after the publication of these instructions.

General safety instructions

- This product is not designed to be used by persons (including children) whose physical, sensory or mental capacity is impaired, or persons with little experience or knowledge, unless they are under supervision or have received prior instructions on using this product by a person responsible for their safety.
- Do not let children play with this product.
- Do not immerse the product in liquid.
- Do not drop, drill or dismantle this equipment, as this will invalidate the warranty.
- Do not expose this equipment to high temperatures or leave it in direct sunlight.

Introduction

Combined with the TaHoma, this product:

- Detects an intrusion into the house
- Offers more options for the connected home (Smart automated systems)

 
It is sensitive to the movements and variations in temperature produced by a moving body.

Contents of the Kit


Description	Qty	Description	Qty
Movement detector	1	Adhesive tabs	1
CR123 battery	1		

Fitting the battery

Press on the grey part of the Indoor movement detector to unclip its front panel.

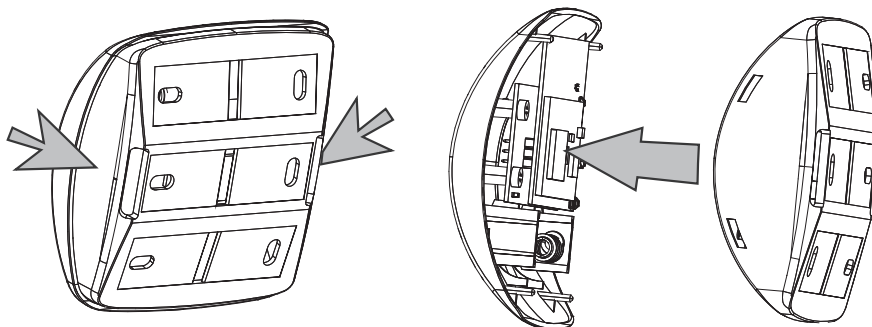

 
Fit the battery in the correct direction
(+ pole on the + side and - pole on the - side).

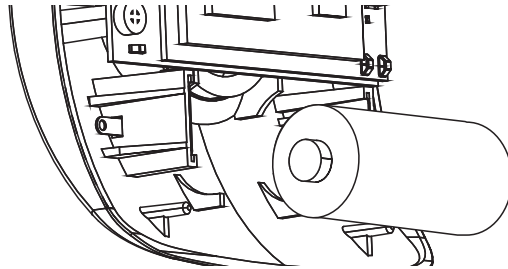

Once the batteries are fitted, you can then add the Indoor movement detector to the TaHoma.

Adding to the TaHoma

 
On the TaHoma interface, select the  tab.

- Click on the Configuration tab .
- Click on the "IO" tab, then "Add".
- Follow the procedure shown on the screen.
- Once added, the light will go out.

Once added to the TaHoma, the Indoor movement detector is operational.

Installation

If several detectors are to be used, the scope of the various Indoor movement detectors must not overlap.

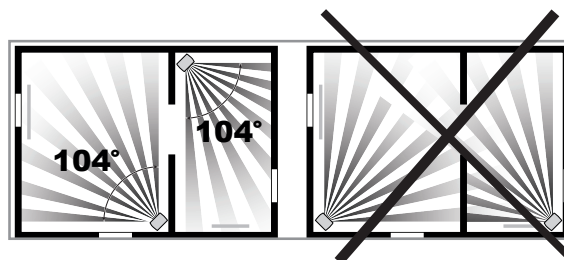

Precautions for use

Never place the Indoor movement detector:

 
 
 
 
Directly towards the sun, towards a window, mirror, curtains, large shrub or blind, on top of or facing a source of heat (radiator, convection heater or chimney), etc.

In a veranda.

In an air current.

In a humid room, to prevent any accidental activation.

Do not install outside.

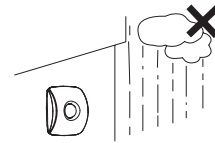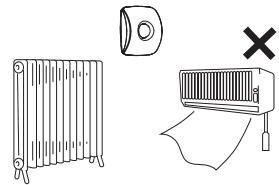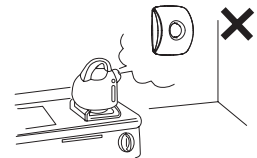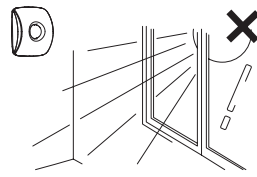


As it features bevelled surfaces, the Indoor movement detector can be placed in a variety of ways, thereby adapting perfectly to your walls, corners or ceilings.

- Wall or ceiling



 - Corner

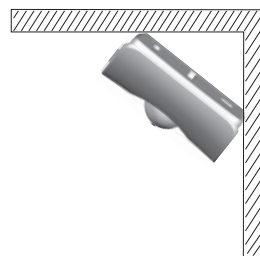


Easy installation with the adhesive tabs

- Clean the surface where you wish to affix the Movement detector.
- Apply the adhesive strips to the back of the Indoor movement detector.
- Affix the back of the Indoor movement detector in the chosen location, ensuring the precautions for use are respected.

Installation with screws

 - Place the back of the Indoor movement detector in the selected location and mark the location of the 2 mounting holes (6 holes for wall and ceiling mounting "A", and 2 holes for mounting in a corner "B") with a pencil.
- Use suitable mounting screws and wall plugs to secure the Indoor movement detector.
- Attach the Indoor movement detector securely.

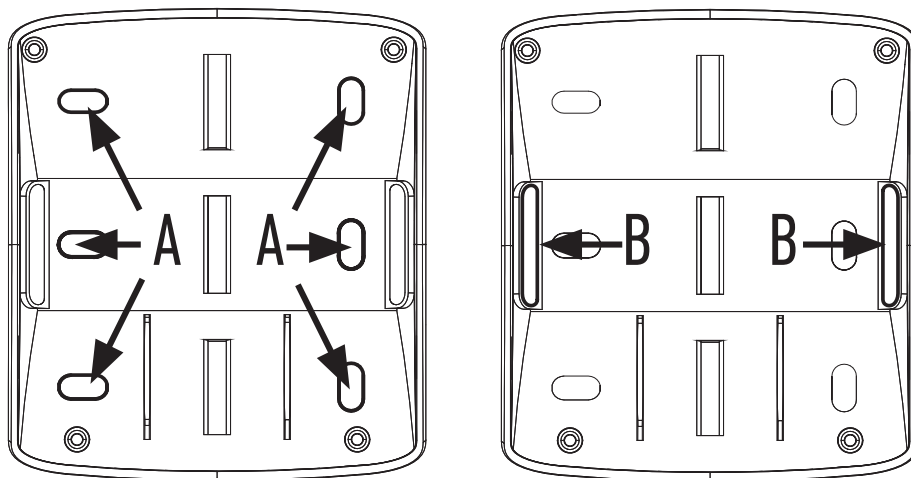

Resetting the Indoor movement detector

If you wish, you may delete the Indoor movement detector from the TaHoma.

To delete the Indoor movement detector from the TaHoma, unclip the unit's front panel and press the programming button for 10 seconds; the light will come on then go off.

Technical data

Indoor movement detector							
Type of battery	CR 123						
Frequency	868-870 MHz io homecontrol®, two-way Tri-band						
Frequency bands and maximum power used	<table border="0"> <tr> <td>868,000 MHz - 868,600 MHz</td> <td>e.r.p. <25 mW</td> </tr> <tr> <td>868,700 MHz - 869,200 MHz</td> <td>e.r.p. <25 mW</td> </tr> <tr> <td>869,700 MHz - 870,000 MHz</td> <td>e.r.p. <25 mW</td> </tr> </table>	868,000 MHz - 868,600 MHz	e.r.p. <25 mW	868,700 MHz - 869,200 MHz	e.r.p. <25 mW	869,700 MHz - 870,000 MHz	e.r.p. <25 mW
868,000 MHz - 868,600 MHz	e.r.p. <25 mW						
868,700 MHz - 869,200 MHz	e.r.p. <25 mW						
869,700 MHz - 870,000 MHz	e.r.p. <25 mW						
Range	8m						
Angle	104°						
Operating temperature	0°C to 60°C						
Index protection rating	IP 20 (inside use, in a dry room)						
Dimensions in mm (H x W x D)	72 x 82 x 35 mm						
Weight	41 g						
Battery life	3 years						



Somfy hereby declares that this product complies with the requirements of Directive 2014/53/EU. The full text of the Declaration of Conformity is available at www.somfy.com/ce.

Recycling



Do not dispose of this product with the household waste. Please take it to a collection point or an approved centre to ensure it is recycled correctly.



Ensure batteries are separated from other types of waste and are recycled via your local recycling centre.

The images contained in this booklet are not legally binding.